

STANDARD FEATURES / REMOTE OPERATION

1) ANTI-SCANNING

The CPU of the alarm when receiving correct code may not respond immediately unless more codes are entered continuously.

2) CODE LEARNING

CPU can learn codes from transmitters, up to a maximum of 4 codes.

3) ARM / DISARM

When the alarm is armed, the engine immobilizes in standby mode and the LED flashes slowly. The alarm will sound whenever the vehicle is hit or intruded. Upon triggering, the park lights flash and siren sounds.

4) CHIRP DEFEAT ARM /DISARM

This feature offers arm and disarm without chirp sound whilst other features remain the same.

5) ARM CONDITION MEMORY

When power supply is cut off, and the alarm is armed, the CPU's memory will remain until power supply is on again. Hence, enabling alarm to be armed again. This prevents inconvenience from being caused while the vehicle is in maintenance.

6) SECURITY RE-ARM

Alarm re-arms automatically 30 seconds after vehicle is disarmed, unless the door has been turned on.

7) PANIC

Hold button 1 for over 2 seconds to activate panic mode. Under this mode, siren keeps sounding with parking light flashing, until button 1 is pressed to release panic mode.

8) MANUAL OVER-RIDE SWITCH

Ignition On : press to over-ride alarm when it is armed

Ignition On : press and hold for 5 seconds to enter code learning mode.

9) IGNITION SAFETY DOOR LOCK

After ignition has been turned on for 10 seconds, doors will lock passively for safety reason.

But if door is opened and closed within 10 seconds, ignition safety door lock features will be cancelled to avoid being locked out. Central lock will unlock immediately upon engine off. During driving, press button 1 to lock. Press button 3 to unlock.

10) LAST DOOR ARMING (PROGRAMMABLE)

With the ignition off, and door is open and closed, alarm will arm itself 30 seconds later. This feature is programmable by mini-jumper within CPU.

OPERATION MANUAL

BUTTON 1

A) Arm

B) Panic -press and hold for 2 seconds

C) With ignition turn on, press to engage door lock

BUTTON 2

A) Disarm

B) With ignition turn on, press to disengage door lock

BUTTON 1+2

A) Chirp defeat arm