

## ALARM STANDARD FEATURES / REMOTE OPERATION

### 1 ANTI-SCANNING

The CPU of the alarm when receiving correct code may not respond immediately unless more codes are entered continuously.

### 2 CODE LEARNING

CPU can learn codes from transmitter, up to a maximum of 4 codes.

### 3 ARM CONDITION MEMORY

When power supply is cut off, and alarm is armed, the CPU's memory will remain until power supply is on again. Hence, enabling alarm to be armed again. This prevents inconvenience from being caused while the vehicle is in maintenance.

### 4 REMOTE ARM / DISARM

When the alarm is armed, the engines immobilizes is in standby mode and LED flashes slowly. The alarm will sound whenever the vehicle is hit or intruded. Upon triggering, the parking lights flashes and siren sounds.

### 5 CHIRP DEFEAT ARM / DISARM

This feature offers arm and disarm without chirp sound whilst other feature remain the same. For permanent chirp defeat, refer to program chart number 7.

### 6 REMOTE CAR FINDER

When arming, press "unlock" button for 2 sec. Siren chirps once, parking light flashes 6 times

### 7 SECURITY RE-ARM

Alarm re-arms automatically 30 seconds after vehicle is disarmed, Unless the door has been opened or ignition has been turned on.

### 8 REMOTE PANIC

Hold "lock" button for over 2 sec. to activate panic mode. Under this mode, siren keeps sounding with parking lights flashing, until "lock" button is pressed to release panic mode.

### 9 MANUAL OVER-RIDE SWITCH

A. Ignition On : press over-ride switch to stop siren sound.

B. Ignition On : press and hold for 5 seconds to enable code learning mode and program option feature.  
C. Ignition On : press over-ride switch 5 time for valet mode.

### 10 IGNITION SAFETY DOOR LOCK

After ignition has been turned on for 10 seconds. Doors will locked passively for safety reason. But if door is opened and closed within 10 sec., ignition safety door lock feature will cancelled to avoid being lock out. Central lock will unlock immediately upon engine off. During driving, press "lock" button to lock. Press "unlock" button to unlock. To cancel this feature refer to program option chart

### 11 LAST DOOR ARMING (PROGRAMMABLE)

With the ignition off, and door is opened and closed, alarm will armed itself 30 seconds later. To cancel this feature refer to program option chart

### 12 REMOTE ANTI-CAR HIJACK SYSTEM

When ignition turn on, hold "Lock+Mute" button for 2 secs. Parking lights will flash for 2 times. This to confirm activation of anti-car hijack system. 1 minute later, siren sounds, parking light flashes, engine immobiliser comes on until ignition is turn off. At that time, siren and parking lights are off, but engine immobiliser still operational. Pressing "unlock" button or press over-ride switch can stop this feature.

### 13 TWO STAGE DISARM

A. In normal disarm, press disarm button  
B. When alarm ton to stop alarm, but the vehicle will remain in armed position until disarm button is pressed again.

### 14 SHOCK SENSOR

When vehicle is hit, the siren will sound for 20 seconds. After which, it will arm itself again.

### 15 SHOCK SENSOR BY PASS

Upon arming. Press and hold "mute" button for 2 seconds, immediately parking lights will flash 3 times. This is to confirm that shock sensor is by pass. To cancel this function, press "lock" button again. Please note that any delay occurring when pressing "mute" button will prevent the function from being activated.

### 16 SMART CHIRPS (TAMPER MEMORY)

If the vehicle has been tampered when the alarm is armed, when user disarms the alarm siren chirps 4 more times, I.e. : 2 chirps + 4 chirps.

### 17 SMART LED

Arming - LED slow flashing  
Disarm - LED off  
Door intrusion when armed - LED quick flashing  
Valet mode - LED solid on  
Last door arming - LED fast flashing for 30 seconds  
Car hijack - LED quick flashing

### 18 AVAILABLE FOR DOME LIGHT DELAY VEHICLE AND OR NORMAL DOME LIGHT VEHICLE

For normal dome light vehicle, alarm will alert immediately when armed, However, in dome light delay vehicle alarm will delay alert a chip until dome light is off  
Refer to program option feature.

### 19 ZONE BY PASS

When door sensor is triggered constantly over a 5 minutes interval, (door remain open, or hood sensor is detect) the alarm siren and parking lights will stop. However, the shock sensor and engine immobiliser will still be in operation to protect the car.

### 20 REMOTE KEYLESS ENTRY (VALET MODE)

With the ignition on, press and hold "mute" button for 3 seconds, parking lights flashes 3 times. Then, the alarm system being off the locking, unlocking remains working. This is known as the valet mode. When ignition is on, hold "mute" button until parking lights flashes once, siren will chirp 3 times, meaning the alarm is switched on again.

## OPERATION MANUAL

### "LOCK" BUTTON

A) Arm with chirp.  
B) Panic - press and hold for 2 seconds.  
C) With ignition turn on, press to engage door lock.

### "UNLOCK" BUTTON

A) Disarm - (FULLY DISARM)  
B) Car Finder - when arming, hold for 2 sec.  
C) 2nd AUX Output - when disarm, hold for 2 sec.  
D) Ignition turn on - press to disengage door lock.

### "LOCK + MUTE " BUTTON

A) 1st AUX Output - press once only.  
B) Anti-carjacking - when ignition on, hold for 2 sec.

### "MUTE" BUTTON

A) Chirp defeat arm  
B) Shock Sensor Bypass- when arming within 5 sec. hold "Mute" button for 2 sec.  
C) Valet Mode - when ignition on within 5 sec. hold " Mute" button for 2 sec.