



ST88 KEYLESS SYSTEM

Simplifying your needs

Product Features & Operations

1. Door Lock

Button 1: A. Door lock

2. Car finder

Button 1: B. When lock-car finder

3. Door unlock

Button 2: Door unlock

4. Remote 2nd channel output (continuous)

Button 1+2

How to use the “Code Learning”

1. Ignition ON, press over-ride switch 5 seconds until parking light flash 5 times, parking light on means system in code learning mode.
2. Press any button of new transmitter for learning , parking lights flash 2 time means waiting for 2nd new transmitter to learn.
3. Press any button of 2nd new transmitter for learning, parking lights flash 3 times means waiting for 3rd new transmitter to learn.
4. Same procedure maximum up to 4 transmitters.
5. If within 10 seconds no new transmitter's signal send out for learning, system turn to normal state.
6. Every time learning new transmitter, Former code (old transmitter) will be erased, here old transmitter must also learn again when new transmitter need to learning.