

STANDARD FEATURES / REMOTE OPERATION

1) ARM / DISARM

Use button 1 to arm and disarm. When arming, central lock is locked, starter kill stand by and parking lights flash once. Siren chirps once. Alarm will be triggered whenever the car is hit, shaken or intruded. Use button 2 to disarm.

2) PANIC

Hold button 1 for over 2 seconds to activate panic mode. Under panic mode, siren keeps chirping and parking lights flashing until button 2 is pressed to release panic mode.

3) CHIRP DEFEAT ARM / DISARM

Press button 1+2 to arm without chirp. When the alarm is triggered, siren chirps and parking lights flash as normal armed condition does. To release chirp defeat, press button 2.

4) SECURITY RE-ARM

Alarm resumes arming automatically if neither doors have not been opened or ignition on within 30 seconds after disarm. This feature is to avoid miss-touched or miss disarmed.

5) IGNITION SAFETY DOOR LOCK

After ignition has been turned on for 5 seconds. Doors will locked passively for safety reason. But if door is opened and closed within 5 seconds. Ignition safety door lock features will cancelled to avoid being lock out.

6) TWO STAGES DISARM

Normal arming -- press disarm button, alarm disarm.
Triggered during arming --
press any button, alarm stop triggering but remain in arm condition. Press disarm button again to disarm.

8) PROGRAMMABLE LAST DOOR ARMING (WITH DOOR LOCK)

Alarm will be arming and door will be locked 30 seconds later whenever engine is off and door has been opened and closed. This feature works only when a mini jumper is placed on 1st pair of pin header.

9) DOOR WARNING SIGNAL

During driving, if doors are not closed well, parking lights will keep flashing to remind the driver.

10) SHOCK SENSOR

When the car is hit or shaken, siren will sound for 20 seconds.

11) ZONE BY-PASS 5 MINUTES

When door is triggered, siren blow for 5 minutes, then alarm will still be in armed condition.

12) CAR FINDER

Press button 3. Siren chirps once, parking lights flashes 6 times to show car position.

13) REMOTE ANTI-CAR HIJACK SYSTEM

Hold button 3 for 2 seconds. Parking lights will flash for 2 times. This is to confirm activation of anti-car hijack system. When the door is opened and closed, this special feature comes in operation. 1 minute later, siren chirps once per 2 seconds for 20 seconds, then siren sounds, parking lights flashes, engine immobilizes comes on until ignition is off. At that time, the siren and parking lights are off, but engine immobilize still operational. Pressing button 2 or manual over-ride switch can stop this feature.

14) SMART LED

LED flashes slowly when the arm is in armed condition. If the door is opened and closed in armed condition, LED will flashes very quickly. In valet mode, LED is solid on.

15) SMART CHIRP (DOOR INTRUSION INDICATION)

Had the door been opened and closed while the alarm was armed, siren chirps extra 4 times more than normal condition when you disarm the alarm.

16) PROGRAMMABLE FOR AIR COMPRESSOR CENTRAL LOCK

This feature works upon when a mini jumper is remove from 3rd pair of pin header.

17) PROGRAMMABLE DOME LIGHT DELAY

Place a mini jumper of the 2nd pair of pin header. Then door sensor standby 5 seconds after arming. If the 2nd pair of pin header are open, door sensor delay detecting until the interior light is off.

18) ANTI-SCAN PROTECTION

19) PAGER INSTALLATION AVAILABLE (OPTIONAL)

20) OVER-RIDE SWITCH

In case you lost the remote controller, then you turn the ignition on and then press the over-ride switch to over-ride arming status.

HOW TO USE THE 'CODE LEARNING'

- A Turn on the ignition. Press and hold manual over-ride switch for 5 sec. Until siren chirps for 5 times and parking lights come on. This means that the code learning mode is in operation.
- B Press any button of new transmitter for learning. Siren chirps for 2 times. This means that the system has acknowledged and is awaiting for 2nd new transmitter to learn.
- C Press any button of new transmitter for learning. Siren chirps for 3 times. This system has acknowledged and is awaiting for 3rd new transmitter to learn.
- D Use the same procedure up to a maximum of 4 transmitter. Upon completion, turn off the ignition.
- E If within 10 seconds, no new transmitter is used, former code (old transmitter) will be erased. Hence old transmitter is required to learn again when new transmitter has completed learning process.

OPERATION MANUAL

- | | |
|------------|--|
| Button 1 | A) Arm
B) Panic - press and hold for 2 sec.
C) With ignition turn on - door lock |
| Button 2 | A) Disarm
B) With ignition turn on -- door unlock |
| Button 3 | A) Car finder
B) Car jacking -- reset by button 2 |
| Button 1+2 | Chirp defeat arm / disarm |