




SingTech Auto Tilt Mirror & Auto Fold Controller (2in1)

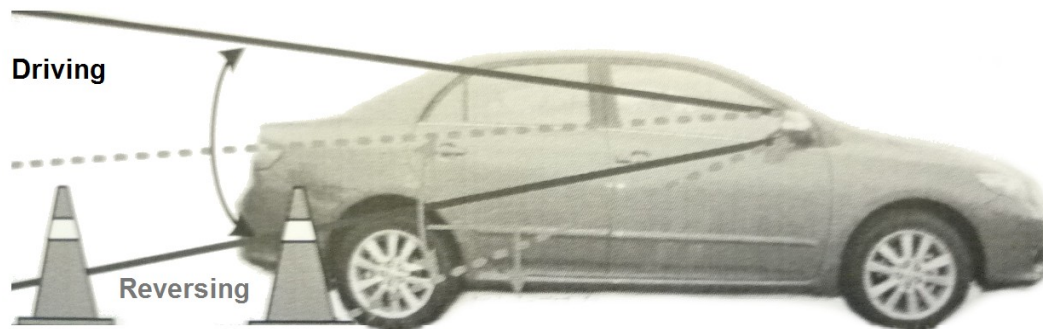

USER MANUAL

Model:10150382

Product Features

Auto Tilt + Auto Fold 2 in 1

Function 1: Door Mirror Auto Tilt

When the car is in reverse (Gear to R position), the door mirror AUTO TILT which allows the driver to observe the blind points behind the car. Once the gear is moved away from reverse (R) position, the door mirror auto back to original viewing angle.

Viewing Angle Setting Procedures for Door Mirror Auto Tilt

Please go through the following steps one by one carefully and make sure each step is completed set up.

a. To tilt up the mirror to utmost by pressing and hold the mirror switch (Click sound will be heard once the mirror reaches the utmost position)

Note: The following b, c, d steps must be proceed continuously

b. Press LOCK for one time (from door lock switch)

↓ **IMMEDIATELY**

c. Gear to R (REVERSE) position

↓ **IMMEDIATELY**

d. Press LOCK for one time (from door lock switch)

After b, c, d steps completed, door mirror auto tilt up and down for 3 times. Please be patient and wait until the mirror is completed stop.

e. Set up the best view angle of door mirror for car driving through the mirror switch adjusted.

f. Press LOCK for one time (from door lock switch)

After e and f steps completed, door mirror auto tilt up and down for 3 times. Please be patient and wait until the mirror is completed stop.

g. Set up the desirable viewing angle of door mirror (viewing angle after mirror tilt down) for car reversing through the mirror switch adjusted.

h. Press LOCK for one time (from door lock switch)

After **g** and **h** steps completed, door mirror auto tilt up and down for 3 times. Once the mirror is completed stop, the viewing angle will be the mirror tilt down position.

Congratulations! You have completed the viewing angle setting procedures for SingTech Auto Tilt Mirror & Auto Fold Controller

Additional Functions for Door Mirror Auto Tilt

1. Temporary Disable Door Mirror Auto Tilt Function for Car Reversing

If the door mirror auto tilt function is unnecessary when car is in reverse, press LOCK for one time (from door lock switch) and the mirror auto tilt function will be released this time.

The door mirror auto tilt function can be activated again by press LOCK for one more time (from door lock switch).

2. Memory Function

The viewing angle of door mirror auto tilt can be set up for different driver needs.

After set up the best view angle of door mirror for car driving through the mirror switch adjusted, the driver just simply press the LOCK for 3 times continuously (from door lock switch). The NEW viewing angle of door mirror auto tilt will be memorized for new driver.

(During Set Up, gear must be AWAY from R position)

Remarks: If the viewing angle of door mirror has been adjusted for LEFT/RIGHT as gear is in R position, the mirror won't be able to back original viewing angle for car driving. Please be noted.

Function 2: Door Mirror Auto Fold

Door Mirrors AUTO FOLD when car doors are locked (ACC OFF). When car doors are unlocked (ACC ON), the door mirrors AUTO OPEN.

1. Once the car engine is OFF (ACC OFF), the door mirrors will auto fold through the following 3 control.

- a. Central lock the car doors through the Remote Control
- b. Central lock the car doors by Car Key
- c. Central lock the car doors by Press the LOCK from door lock switch

2. Once the car engine is ON (ACC ON), the door mirrors will auto open and back to original position.

Remarks:

1. Please keeps door mirror auto fold switch for ON all the time
2. Door mirror auto fold function is only related to central lock of car doors, nothing to do with central unlock of car doors.

Wiring schematic

